




Citizen 9200,9201,9202 Movement Parts (1)

Compiled by EmmyWatch - <https://www.emmywatch.com>

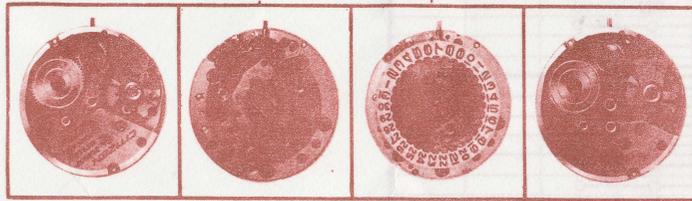

92-1
(Catalog No.)

92-2
(Catalog No.)

92-1
(Catalog No.)

92-2
(Catalog No.)

920 *
Center second
Thickness 3.65mm


320 *
Center second Date indication
Thickness 4.3mm

923 *
Center second
Thickness 3.65mm

921 *
Center second Second hand stopping
Thickness 3.65mm

924 *
Center second
Thickness 3.65mm

Size	26.6mm φ
Ligne	12'''
Vibrations per hour	18,000

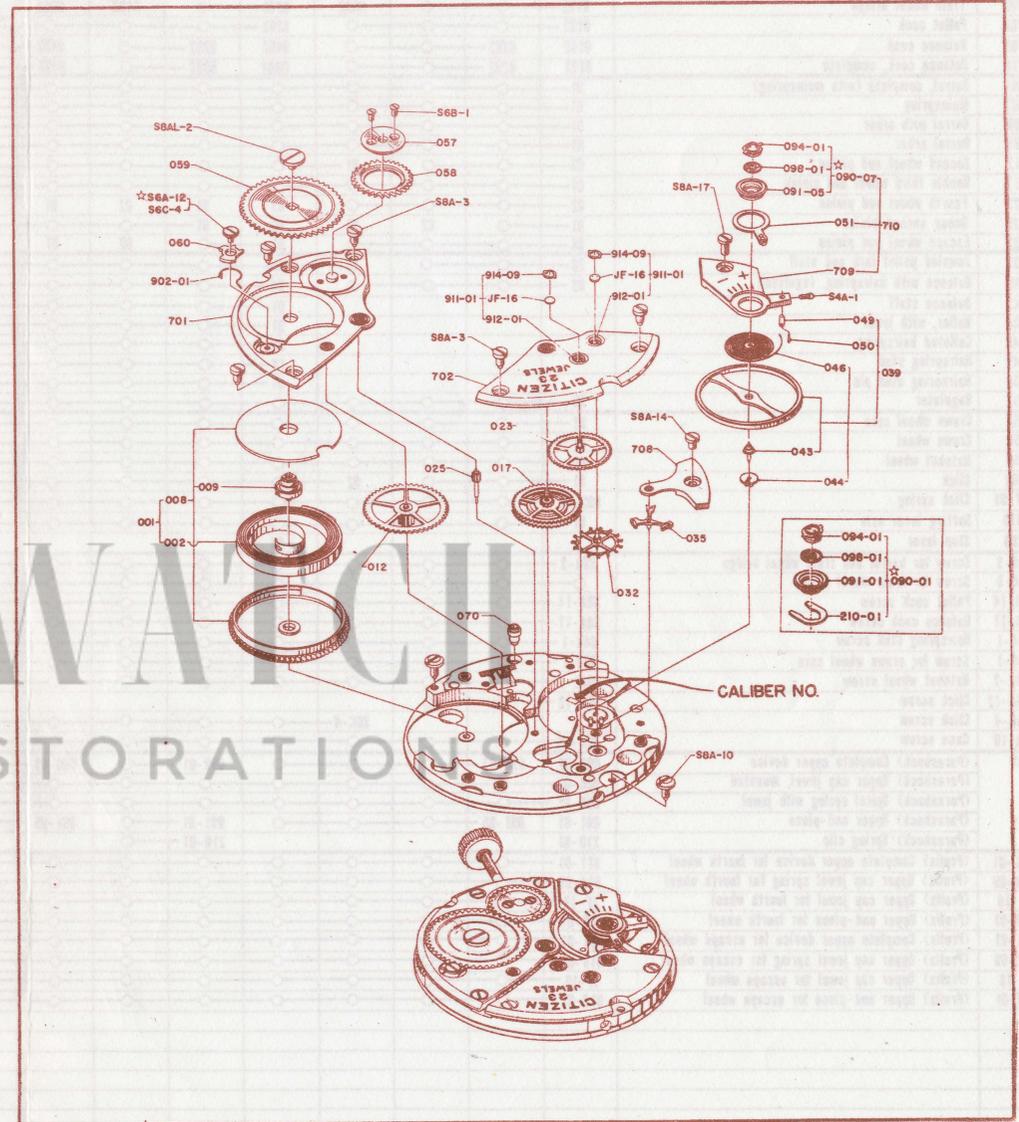

1. Even when the shape of a particular part in your movement differs from that of the part shown in the EXPLODED VIEW OF MOVEMENTS, the number will be the same, if the part is used for the same purpose.
2. For parts bearing star marks (☆), see the LIST OF COMMON PARTS.
3. For spare parts not shown in the EXPLODED VIEW OF MOVEMENTS, see the LIST OF COMMON PARTS on the right page where they are shown by red belts.

Parts No.	Name of Parts	Caliber No. & Nos. of Jewels	9200-25	9201-25	9202-25	9240-23	9210-21	9230-21	9230-23	9231-21	9231-23	9232-21	9232-23	3200-21	3201-21
701	Barrel and train wheel bridge		0192	0192	0192	0492	0292	0192	0492	0292	0492	0292	0492	0292	0192
702	Train wheel bridge		0192	0192	0192	0492	0292	0192	0492	0292	0492	0292	0492	0292	0192
708	Pallet cock		0192	0192	0192	0492	0292	0192	0492	0292	0492	0292	0492	0292	0192
709	Balance cock		0192	0192	0192	0492	0292	0192	0492	0292	0492	0292	0492	0292	0192
710	Balance cock, complete		0192	0192	0192	0492	0292	0192	0492	0292	0492	0292	0492	0292	0192
001	Barrel, complete (with mainspring)		01	01	01	04	02	01	04	02	01	04	02	01	04
002	Mainspring		01	01	01	04	02	01	04	02	01	04	02	01	04
008	Barrel with arbor		01	01	01	04	02	01	04	02	01	04	02	01	04
009	Barrel arbor		01	01	01	04	02	01	04	02	01	04	02	01	04
012	Second wheel and pinion		03	03	03	01	03	01	03	01	03	01	03	01	03
017	Variable third wheel and pinion		01	01	01	04	02	01	04	02	01	04	02	01	04
023	Fourth wheel and pinion		02	02	02	01	02	01	02	01	02	01	02	01	02
025	Swamp second pinion		01	01	01	04	02	01	04	02	01	04	02	01	04
032	Escape wheel and pinion		04	04	04	01	04	01	04	01	04	01	04	01	04
035	Jeweled pallet fork and staff		20	20	20	03	20	03	20	03	20	03	20	03	20
039	Balance with hairspring, regulated		03	03	03	04	01	04	01	04	01	04	01	04	01
043	Balance staff		03	03	03	04	01	04	01	04	01	04	01	04	01
044	Bolus, with jewel		01	01	01	04	02	01	04	02	01	04	02	01	04
046	Coiled hairspring		01	01	01	04	02	01	04	02	01	04	02	01	04
049	Hairspring stud		01	01	01	04	02	01	04	02	01	04	02	01	04
050	Hairspring stud pin		01	01	01	04	02	01	04	02	01	04	02	01	04
051	Regulator		20	20	20	03	20	03	20	03	20	03	20	03	20
057	Crown wheel case		01	01	01	04	02	01	04	02	01	04	02	01	04
058	Crown wheel		01	01	01	04	02	01	04	02	01	04	02	01	04
059	Hatchet wheel		01	01	01	04	02	01	04	02	01	04	02	01	04
060	Click		01	01	01	04	02	01	04	02	01	04	02	01	04
902-01	Click spring		01	01	01	04	02	01	04	02	01	04	02	01	04
070	Setting lever axle		01	01	01	04	02	01	04	02	01	04	02	01	04
269	Stop lever		01	01	01	04	02	01	04	02	01	04	02	01	04
SA-3	Screw for barrel and train wheel bridge		SA-3	SA-3	SA-3	04	01	04	01	04	01	04	01	04	01
SA-3	Screw for train wheel bridge		SA-3	SA-3	SA-3	04	01	04	01	04	01	04	01	04	01
SA-14	Pallet cock screw		SA-14	SA-14	SA-14	04	01	04	01	04	01	04	01	04	01
SA-17	Balance cock screw		SA-17	SA-17	SA-17	04	01	04	01	04	01	04	01	04	01
SA-1	Hairspring stud screw		SA-1	SA-1	SA-1	04	01	04	01	04	01	04	01	04	01
SB-1	Screw for crown wheel case		SB-1	SB-1	SB-1	04	01	04	01	04	01	04	01	04	01
SM-2	Ratchet wheel screw		SM-2	SM-2	SM-2	04	01	04	01	04	01	04	01	04	01
☆ SA-12	Click screw		SA-12	SA-12	SA-12	04	01	04	01	04	01	04	01	04	01
☆ SGC-4	Case screw		SGC-4	SGC-4	SGC-4	04	01	04	01	04	01	04	01	04	01
SA-10	Complete upper device		SA-10	SA-10	SA-10	04	01	04	01	04	01	04	01	04	01
(Parashock)	Upper cap jewel, mounted		090-01	090-01	090-01	04	01	04	01	04	01	04	01	04	01
(Parashock)	Spiral spring with jewel		094-01	094-01	094-01	04	01	04	01	04	01	04	01	04	01
(Parashock)	Upper and -place		091-01	091-01	091-01	04	01	04	01	04	01	04	01	04	01
(Parashock)	Spring clip		210-01	210-01	210-01	04	01	04	01	04	01	04	01	04	01
911-01	Complete upper device for fourth wheel		911-01	911-01	911-01	04	01	04	01	04	01	04	01	04	01
914-09	Upper cap jewel, spring for fourth wheel		914-09	914-09	914-09	04	01	04	01	04	01	04	01	04	01
JF-16	Upper cap jewel for fourth wheel		JF-16	JF-16	JF-16	04	01	04	01	04	01	04	01	04	01
912-01	Upper end -piece for fourth wheel		912-01	912-01	912-01	04	01	04	01	04	01	04	01	04	01
911-01	Complete upper device for fourth wheel		911-01	911-01	911-01	04	01	04	01	04	01	04	01	04	01
914-09	Upper cap jewel, spring for escape wheel		914-09	914-09	914-09	04	01	04	01	04	01	04	01	04	01
JF-16	Upper cap jewel for escape wheel		JF-16	JF-16	JF-16	04	01	04	01	04	01	04	01	04	01
912-01	Upper end -piece for escape wheel		912-01	912-01	912-01	04	01	04	01	04	01	04	01	04	01

WWW.CITIZEN
VINTAGE RESTORATIONS

