



EMMYWATCH
VINTAGE RESTORATIONS

Rolex 1120 Movement Parts (1)

Compiled by EmmyWatch - <https://www.emmywatch.com>

Calibre 1120

Ø20.00mm
Ht: 5.25mm
Train: 19.800

- Automatic
- Small second
- Shock Proof
- 27 Jewels

Base Calibre 1120










Image	Rolex No.	Description
	171	Screw for case
	1843	Screw for crown wheel core
	1878	Spring for in-setting for escape wheel-upper /lower
	2926	Screw for pallet bridge
	2941-1	Adjusting washer: 1/100
	2941-2	2/100
	2941-3	3/100
	2941-4	4/100
	2941-5	5/100
	2984	Spring for in-setting for balance-lower
	4465	Friction spring for hour wheel
	4493	Cap jewel for balance-lower
	6142	Jewel for: Reversing wheel-upper /lower
		Intermediate wheel n°1-upper / lower









Image	Rolex No.	Description
	6601	Barrel arbor
	6603	Barrel with arbor
	6604	Centre wheel with cannon pinion
	6605	Jewel for centre wheel-upper
	6606	Third wheel
	6607	Jewel for: • Third wheel-upper • Second wheel-upper
	6608	Jewel for third wheel-lower
	6609	Second wheel
	6611	Jewel for second wheel-lower
	6612	Escape wheel, 27 jewels
	6613	Pallet bridge
	6615	Pallet fork
	6615-1	Banking pin
	6616	Pallet staff










 




Image	Rolex No.	Description
	6617	Entry pallet
	6618	Exit pallet
	6619	Jewel for pallet fork-upper
	6619-1	Jewel for pallet fork-lower
	6621	Balance bridge
	6622	Screw for: • Barrel bridge • Train wheel bridge • Balance bridge
	6624	Balance with flat hairspring, timed
	6626	Screw for balance
	6627	Screw for regulating the balance
	6628	Escape wheel, 17 jewels
	6632	Balance staff
	6633	Roller
	6635	Regulator
	6637	Winding pinion
















Image	Rolex No.	Description
	6638	Sliding pinion
	6639	Crown wheel
	6640	Crown wheel core
	6641	Crown wheel seating
	6643	Ratchet wheel
	6645	Click
	6646	Screw for click
	6647	Spring for click
	6648	Setting lever
	6649	Screw for setting lever
	6650	Jumper for setting lever
	6652	Yoke for sliding pinion
	6652-1	Yoke stud
	6653	Spring for yoke
	6654	Setting wheel







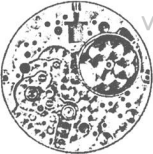



Image	Rolex No.	Description
	6655	Minute wheel
	6655-1	Stud for minute wheel
	6656	Cannon pinion
	6657	Hour wheel
	6658	Screw for: <ul style="list-style-type: none"> • Screw for barrel bridge, short • Screw for automatic device bridge
	6660	Screw for dial
	6680	Main plate
	6682	Barrel bridge
	6684	Train wheel bridge
	6690	Mainspring, strength standard
	6690-1	Mainspring, strength weak














Image	Rolex No.	Description
	6695	In-setting for escape wheel 17 jewels-upper /lower
	6697	Winding stem
	6698	Automatic device upper bridge
	6701	Bearing pad for oscillating weight
	6702	Automatic device lower bridge
	6704	Screw for automatic device lower bridge
	6705	Oscillating weight
	6706	Jewel for oscillating weight-lower
	6707	Axle for oscillating weight
	6708	Winding wheel
	6709	Bolt for winding wheel
	6710	Screw for winding wheel bolt
	6711	Reversing wheel, with cliks






















Image	Rolex No.	Description
	6711-3	Spring-clip for reversing wheel
	6711-4	Click for reversing wheel
	6714	Intermediate wheel n°1
	6717	Intermediate wheel n°2
	6718	Jewel for intermediate wheel n°2-upper
	6719	Jewel for intermediate wheel n°2-lower
	6722	Automatic device module
	6724	Set of screws
	6750	Shock-absorber for balance-upper (elastor)
	6754	Shock-absorber for balance-lower (elastor)
	6755	Shock-absorber for balance-lower (flector)
	6756	In-setting for balance-lower (for 6755)
	6759-1	Ring-lower (for 6755)

Image	Rolex No.	Description
	6760	In-setting for escape wheel-upper /lower
	7863	Screw for stud
	7934	Spring with axle for in-setting for balance-upper /lower (for 6750 - 6754)
	54445	Screw for ratchet wheel
	54450	Screw for setting lever jumper
	95019-2	In-setting for balance-upper / lower (for 6750 - 6754)
	95019-3	Capjewel for: <ul style="list-style-type: none"> • Escape wheel-upper /lower • Balance-upper /lower (for 6750 - 6754)
	95019-4	Spring for in-setting for balance-upper /lower (for 6750 - 6754)