



**EMMYWATCH**  
VINTAGE RESTORATIONS

**Rolex 2030 Movement Parts (1)**

*Compiled by EmmyWatch - <https://www.emmywatch.com>*

# Calibre 2030

Ø20.0mm  
Ht: 5.40mm  
Train: 28.800

- Automatic
- Centre Seconds
- Shock Proof
- 28 Jewels

## Base Calibre 2030








Image	Rolex No.	Description
	123	Bridge
	132	Bridge
	167	Screw for bridge
	4410	Main plate
	4411	Barrel bridge
	4412	Train wheel bridge
	4413	Minute pinion bridge








Image	Rolex No.	Description
	4414	Pallet bridge
	4415	Balance bridge
	4416	Winding bridge
	4417	Pillar for: • Barrel bridge • Train wheel bridge • Minute pinion bridge
	4419	Mainspring, strength standard
	4420	Mainspring, strength weak
	4421	Barrel arbor
	4422	Barrel with arbor
	4423	Minute pinion with cannon pinion
	4424	Great wheel
		Third wheel
	4425	Second wheel
		Centre second pinion
	4427	Centre second pinion


 













Image	Rolex No.	Description
	4428	Minute pinion friction spring
	4429	Escape wheel
	4430	Pallet fork
	4431	Pallet staff
	4432	Balance with flat hairspring, timed
	4433	Balance staff
	4434	Roller
	4435	Hairspring support
	4436	Ring for hairspring support
	4437	Regulator
	4437-1	Spring-clip for regulator
	4438	Winding stem
	4439	Winding pinion
	4440	Sliding pinion
	4441	Crown wheel
















Image	Rolex No.	Description
	4442	Friction spring for crown wheel
	4443	Intermediate crown wheel
	4444	Wig-wag pinion
	4445	Ratchet wheel
	4446	Click
	4447	Spring for click
	4448	Setting lever
	4449	Spring for setting lever
	4450	Jumper for setting lever
	4451	Yoke for sliding pinion
	4452	Spring for yoke
	4453	Setting wheel
	4454	Intermediate setting wheel
	4455	Minute wheel
	4456	Stud for minute wheel











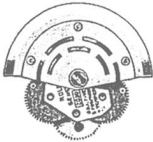 

Image	Rolex No.	Description
	4457	Cannon pinion
	4458	Hour wheel
	4459	Plate for balance stop spring
	4460	Balance stop spring
	4461	Crown wheel core
	4465	Friction spring for hour wheel
	4471	Automatic device upper bridge
	4472	Automatic device lower bridge
	4473	Bearing pad for oscillating weight
	4474	Oscillating weight
	4475	Automatic device module
	4476	Axle for oscillating weight















Image	Rolex No.	Description
	6100	Jewel for centre wheel-upper
	6101	Jewel for centre wheel-lower
	6102	Jewel for: • Third wheel-upper • Second wheel-upper
	6103	Jewel for: • Third wheel-lower • Second wheel-lower
	6140	Jewel for oscillating weight-lower
	6141	Jewel for reversing wheel-upper
	6142	Jewel for reversing wheel-lower
	6143	Jewel for driving wheel for ratchet wheel-upper /lower
	6190	Bush for barrel-upper
	6191	Bush for center second pinion
	54411	Screw for: • Barrel bridge • Train wheel bridge, low head
	54411-1	Screw for: • Barrel bridge • Train wheel bridge • Balance bridge, high head
	54413	Screw for minute pinion bridge
	54414	Screw for pallet bridge
	54416	Screw for winding bridge





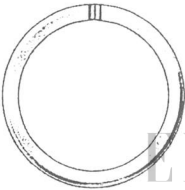 



















Image	Rolex No.	Description
	4477	Pinion for oscillating weight
	4478	Spring-clip for oscillating weight
	4479	Reversing wheel, mounted
	4480	Driving wheel for ratchet wheel
	4481	Enlargement ring
	4490	Shock-absorber for balance-upper
	4491	Shock-absorber for balance-lower
	4492	In-setting for balance-upper / lower
	4493	Capewel for: <ul style="list-style-type: none"> <li>• Balance-upper /lower</li> <li>• Capjewel for escape wheel-upper /lower</li> </ul>
	4494	Spring for in setting for balance-upper /lower
	4495	In setting for escape wheel-upper /lower
	4497	Spring for in setting for escape wheel-upper /lower



Image	Rolex No.	Description
	54435	Screw for hair-spring support
	54445	Screw for ratchet wheel
	54446	Screw for click
	54449	Screw for setting lever spring
	54450	Screw for setting lever jumper
	54459	Screw for plate for balance stop spring
	54471	Screw for automatic device upper bridge, low head
	54471-1	Screw for automatic device upper bridge, high head
	54472	Screw for automatic device lower bridge
	54499	Screw for dial
	54500	Set of screws
	95016	Jewel for pallet fork-upper /lower