



Rolex 4030 Movement Parts (1)








Compiled by EmmyWatch - <https://www.emmywatch.com/>

Calibre 4030

Ø30.50mm
Ht: 6.55mm
Train: 28.800

- Automatic chronograph with hour counter
- Shock Proof
- 31 Jewels

Rase Calibre 4030

Image	Rolex No.	Description
	127	Bridle
	166	Screw for bridle
	55051	Screw for stud
	95019-2	In setting for balance-upper / lower
	95019-3	Cap jewel for balance-upper / lower
	95019-4	Spring for in setting for balance-upper / lower
	4030-100	Main plate

Image**Rolex No.****Description**

4030-105

Barrel and train wheel bridge



4030-115

Pallet bridge



4030-116

Escape wheel bridge



4030-120

Balance bridge



4030-201

Winding stem



4030-204

Winding pinion



4030-205

Sliding pinion



4030-209

Crown wheel seating



4030-210

Crown wheel



4030-211

Crown wheel core



4030-220

Setting lever



4030-222

Axle for setting lever

Image	Rolex No.	Description
	4030-230	Jumper for setting lever
	4030-235	Bridge for minute train
	4030-240	Yoke for sliding pinion
	4030-241	Spring for yoke
	4030-250	Setting wheel
	4030-251	Intermediate setting wheel
	4030-253	Setting minute wheel
	4030-260	Minute wheel
	4030-270	Cannon pinion ht. 2.04mm
	4030-280	Hour wheel ht. 1.35mm
	4030-300	Click
	4030-301	Spring for click
	4030-305	Ratchet wheel
	4030-307	Barrel arbor
	4030-310	Barrel with arbor














Image	Rolex No.	Description
	4030-311	Mainspring, strength standard
	4030-311-1	Mainspring, strength weak
	4030-335	Centre wheel with pinion ht. 2.04mm
	4030-340	Third wheel
	4030-360	Second wheel
	4030-410	Escape wheel
	4030-419	Pallet staff
	4030-421	Pallet fork
	4030-425	Roller
	4030-429	Balance staff
	4030-432	Balance with Breguet hairspring, timed
	4030-453	Stud support with small plate
	4030-502	Reduction wheel
	4030-503	Bolt for reduction wheel

















Image	Rolex No.	Description
 	4030-512	Driving wheel for crown wheel
 	4030-540	Reversing wheel
 	4030-542	Reverser intermediate wheel
	4030-570	Oscillating weight
	4030-934	Bolt for extension-pushers
	4030-953-2	Extension-pusher, short
	4030-953-4	Extension-pusher, long
	4030-0915	Shock-absorber for balance-upper
	4030-0916	Shock-absorber for balance-lower
	4030-5000	Set of screws
	4030-5001	Set of screws for chronograph
	4030-5013	Screw for dial
	4030-5105	Screw for barrel bridge

Image	Rolex No.	Description
	4030-5106	Screw for: • Barrel bridge • Train wheel bridge • Pallet bridge • Escape wheel bridge
	4030-5120	Screw for balance bridge
	4030-5211	Screw for crown wheel core
	4030-5235	Screw for minute train bridge, short
	4030-5236	Screw for minute train bridge, long
	4030-5241	Screw for: • Spring for yoke • Spring for conveyor
	4030-5300	Screw for click
	4030-5503	Screw for reduction wheel bolt
	4030-5934	Screw for bolt for extension-pushers
	4030-7502	Stud for reduction wheel
 	4030-8000	Chronograph wheel
 	4030-8020	Minute-counting wheel
 	4030-8060	Driving wheel
	4030-8070	Column wheel
	4030-8080	Clutch












 



Image	Rolex No.	Description
	4030-8100	Sliding gear
	4030-8140	Operating lever
	4030-8157	Cover for operating lever hook
	4030-8180	Yoke for fly-back
	4030-8200	Lock
	4030-8220	Hammer
	4030-8270	Jumper for minute counter
	4030-8290	Friction for chronograph wheel
	4030-8320	Spring for clutch
	4030-8325	Spring for sliding gear
	4030-8335	Spring for operating lever
	4030-8345	Spring for lock
	4030-8350	Spring for hammer
	4030-8355	Jumper for column wheel
	4030-8358	Jumper sole for column wheel
















Image	Rolex No.	Description
	4030-8400	Eccentric for clutch pivoting
	4030-8401	Eccentric for clutch banking
	4030-8406	Eccentric for finger depth
	4030-8500	Bridge for chronograph
	4030-8600	Wheel for hour counting
	4030-8610	Conveyor
	4030-8620	Bridge for hour recorder
	4030-8640	Switch
	4030-8680	Hour hammer
	4030-8720	Spring for conveyor
	4030-8730	Spring for hour hammer
	4030-9251	Bush for intermediate setting wheel, lower
	4030-9309	Bush for barrel-upper
	4030-9310	Bush for barrel-lower
	4030-9335	Bush for centre wheel-upper



























Image	Rolex No.	Description
	4030-9336	Bush for centre wheel-lower
	4030-9340	Jewel for third wheel-upper
	4030-9341	Jewel for third wheel-lower
	4030-9360	Jewel for second wheel-upper
	4030-9361	Jewel for: <ul style="list-style-type: none"> • Second wheel-lower • Reversing wheel-upper /lower
	4030-9410	Jewel for escape wheel-upper
	4030-9411	Jewel for escape wheel-lower
	4030-9420	Jewel for pallet fork-upper /lower
	4030-9512	Jewel for driving wheel for crown wheel-upper /lower
	4030-9542	Jewel for: <ul style="list-style-type: none"> • Jumper for minute counter-upper /lower • Reverser intermediate wheel-upper /lower • Sliding gear bridge
	4030-51497	Screw for ball bearing
	4030-58070	Screw for column wheel
	4030-58080	Screw for: <ul style="list-style-type: none"> • Clutch • Bridle of stud support
	4030-58081	Endshake for cluth rocker
	4030-58100	Screw for: <ul style="list-style-type: none"> • Sliding gear • Chrono-wheel friction
	4030-58140	Screw for operating lever
	4030-58200	Screw for lock

Image	Rolex No.	Description
	4030-58220	Supporting screw for hammer
	4030-58270	Screw for jumper for minute counter
	4030-58320	Screw for spring for clutch
	4030-58325	Screw for sliding gear spring
	4030-58335	Screw for operating lever spring
	4030-58350	Screw for hammer spring
	4030-58355	Supporting screw for column wheel jumper sole
	4030-58500	Screw for chronograph bridge
	4030-58610	Screw for conveyor
	4030-58620	Screw for hour recorder bridge
	4030-58680	Screw for hour hammer
	4030-78640	Maintainblok for switch
	4030-98000	In-setting for chronograph wheel-upper
	4030-98020	Jewel for minute-counting wheel-upper
	4030-98021	Bush for minute-counting wheel-lower
	4030-98104	Jewel for sliding gear lever-upper
	4030-98106	Jewel for sliding gear
	4030-98602	Bush for hour counting wheel-upper
	4030-98603	Bush for hour counting wheel-lower