



Seiko 3423A Movement Parts (1)

Compiled by EmmyWatch - <https://www.emmywatch.com>

Cal. 3423A



125 545



126 545



☆ 221 545



231 545



☆ 241 545



261 545



☆ 271 545



281 545



282 545



354 545



383 545



384 545



386 545



388 545



391 545



436 545



☆ 470 543



556 545



701 545



719 545



720 545



☆ 801 515



810 545



817 545



867 545



868 545



873 545



963 545



4001 545



4002 545



4146 545



4216 545



4239 545



4242 545



4259 545



4270 545



4408 545



☆Maxell SR726SW



022 241



022 282



022 754

2/1

Cal. 3423A

Characteristics

Casing diameter : ϕ 18.0 mm
 Maximum height : 3.6 mm without battery
 Jewels : 6 j
 Frequency of quartz crystal oscillator : 32,768 Hz (Hz=Hertz Cycles per second)
 Driving system : Step motor (2 poles)
 Regulation system : Trimmer condenser
 Second setting device
 Calendar (Day & Date)
 Instant setting device for day & date calendar
 Bilingual change-over system for day of the week
 Battery life indicator : Second hand moves in two-second interval

PART NO.	PART NAME	PART NO.	PART NAME
125 546	Train wheel bridge	022 241	Battery connection (+) screw
126 545	Additional train wheel bridge	022 241	Circuit block screw
☆221 545	Center wheel & pinion	022 241	Setting lever spring screw
☆221 543		022 241	Anti-magnetic shield plate screw
231 545	Third wheel & pinion	022 282	Date & Day driving wheel screw
☆241 545	Fourth wheel & pinion	022 754	Minute wheel bridge screw
☆241 543		022 754	Day jumper screw
261 545	Minute wheel	023 341	Guid pin for minute wheel bridge
☆271 545	Hour wheel	023 365	Guid tube for day corrector
☆271 543		023 397	Guid pin for lower end-piece for third wheel
281 545	Setting wheel	027 051	Tube for battery connection (+)
282 545	Clutch wheel	027 052	Pin for date & day driving wheel
354 545	Winding stem	027 867	Yoke pin
383 545	Setting lever	027 868	Minute wheel pin
384 545	Yoke (Clutch lever)	027 869	Second-setting lever pin
386 545	Minute wheel bridge	027 870	Setting lever pin
388 545	Setting lever spring	027 871	Tube for day corrector
391 545	Second setting lever	027 872	Guid tube for day corrector
436 545	Lower end-piece for third wheel	027 946	Eccentric dial pin
☆470 543	Day star with dial disk	☆Maxell SR726SW	Silver oxide battery
556 545	Date finger	☆U.C.C.397	
701 545	Fifth wheel & pinion		
719 545	Day corrector		
720 545	Day corrector spring		
☆801 515	Date dial		
810 545	Date jumper		
817 545	Intermediate date wheel		
867 545	Day & Date driving wheel		
868 545	Day finger		
873 545	Day jumper		
963 545	Snap for day star with dial disk		
4001 545	Circuit block		
4002 545	Coil block		
4146 545	Step rotor		
4216 545	Insulator for battery		
4239 545	Rotor stator		
4242 545	Battery connection (+)		
4259 545	Anti-magnetic shield plate		
4270 545	Battery connection (-)		
4408 545	Insulating spacer for circuit block		
011 542	Upper hole jewel for fourth wheel		
011 547	Upper hole jewel for third wheel		
011 547	Upper hole jewel for fifth wheel		
011 547	Upper hole jewel for step rotor		
011 547	Lower hole jewel for step rotor		
011 550	Lower hole jewel for fifth wheel		
022 241	Train wheel bridge screw		

☆⇒Please see remarks on the reverse page.
 Part numbers in light letters are not shown in photos.

 
 
 


 
Cal. 3423A

Remarks :

Center wheel & pinion, Fourth wheel & pinion and Hour wheel

There are two different types as specified below.

Combination :

Type	Center wheel & pinion	Fourth wheel & pinion	Hour wheel
a. Dial with calendar frame	 ☆221 545	 ☆241 545	 ☆271 545
b. Dial without calendar frame	 ☆221 543	 ☆241 543	 ☆271 543

Day star with dial disk

☆470 543 (English ↔ Spanish, black figures on white background).....

Used when both the crown and the calendar frame position are located at **3** o'clock position. If any other type of day star with dial disk is required, specify the number printed on the disk.

Date dial

☆801 515.....Used when both the crown and the calendar frame are located at **3** o'clock position. If any other type of date dial is required, specify ① Cal. No. ② The crown position ③ The calendar frame position ④ Dial No. and ⑤ Date color of date dial.

Battery

☆Maxell SR726SW } The applied battery for this calibre might be added the substitutive in the future. In that case, please refer to separate **"BATTERIES FOR SEIKO QUARTZ WATCHES"**.
 ☆U.C.C. 397 }