





Seiko 4326A Movement Parts (1)

Compiled by EmmyWatch - <https://www.emmywatch.com>

Cal. 4326A

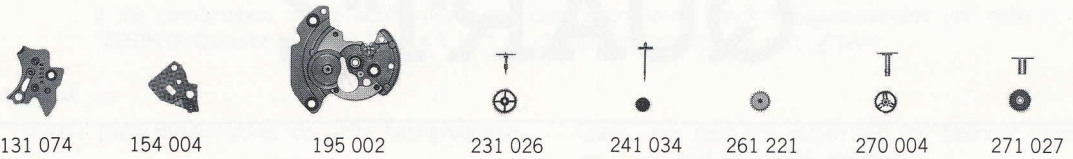

 131 074 154 004 195 002 231 026 241 034 261 221 270 004 271 027




282 028 354 041 354 043 372 003 373 250 ☆383 026 384 013



385 007 388 013 391 011 396 006 397 017 499 003 556 011 701 005 706 004



☆801 043 802 015 803 003 808 018 810 008 817 011 868 009 ☆870 298

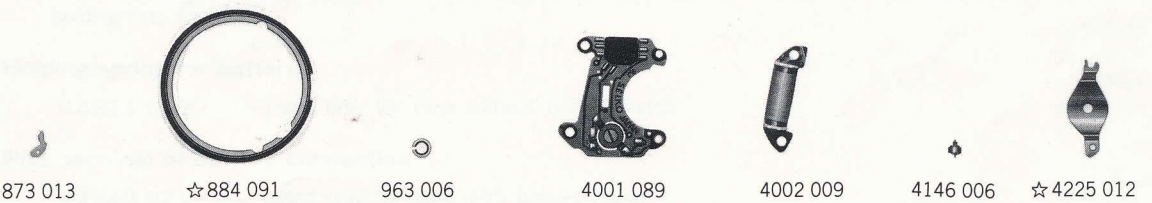

873 013 ☆884 091 963 006 4001 089 4002 009 4146 006 ☆4225 012



☆4242 071 4259 003 4270 020 011 541 SEIKO SB-D1

012 354	012 417	012 443	012 444	012 448	012 752	012 774	012 775	012 923	017 074
017 075	017 076	017 079	017 503	017 714	017 924				3/1

☆⇨Please see remarks on the next reverse page.

Cal. 4326A

Characteristics

Casing diameter : ϕ 18.00 mm
 Maximum height : 4.24 mm
 Jewels : 2 j
 Frequency of quartz crystal oscillator : 32,768 Hz (Hz=Hertz Cycles per second)
 Driving system : Step motor system (2 poles)
 Regulation system : Trimmer condenser
 Second setting device
 Calendar (day & date)
 Instant setting device for day & date calendar
 Bilingual change-over system for day of the week
 Battery life indicator : Second hand moves in two-second interval.

PART NO.	PART NAME	PART NO.	PART NAME
131 074	Third wheel bridge	4270 020	Battery connection
154 004	Fifth wheel bridge	011 541	Upper hole jewel for step rotor
195 002	Calendar plate	011 541	Lower hole jewel for step rotor
231 026	Third wheel & pinion	012 354	Setting lever spring screw
241 034	Fourth wheel & pinion	012 417	Third wheel bridge screw
261 221	Minute wheel	012 443	Circuit block screw A (screw for holding spring for battery, screw for plus terminal of battery connection)
270 004	Center minute wheel	012 444	Calendar plate screw
271 027	Hour wheel	012 448	Back plate (anti-magnetic) screw
282 028	Clutch wheel	012 752	Fifth wheel bridge screw
354 041	Winding stem (12.89 mm)	012 774	Date driving wheel screw
354 043	Winding stem (17.89 mm)	012 774	Date dial guard screw
372 003	Joint stem (movement portion)	012 775	Circuit block screw B
373 250	Joint stem (crown portion)	012 923	Stopper screw for third wheel bridge
☆383 026	Setting lever	017 074	Stopper tube for circuit block
☆383 027		017 075	Tube for third wheel bridge screw
☆383 034		017 076	Tube for circuit block screw A
384 013	Yoke (Clutch lever)	017 079	Tube for circuit block screw B
385 007	Yoke spring (Clutch lever spring)	017 503	Spacer for circuit block
388 013	Setting lever spring	017 714	Lower bush for fifth wheel
391 011	Second setting lever	017 924	Eccentric dial pin
396 006	Friction spring for fourth wheel & pinion	SEIKO SB-D1	Silver oxide battery
397 017	Lever for unlocking stem	U.C.C.384	Silver oxide battery
499 003	Day finger ring	U.C.C.392	
556 011	Date finger		
701 005	Fifth wheel		
706 004	Sixth wheel & pinion		
☆801 043	Date dial		
☆801 044			
☆801 045			
☆801 047			
802 015	Date driving wheel		
803 003	Setting wheel lever complete		
808 018	Date dial guard		
810 008	Date jumper		
817 011	Intermediate date wheel		
868 009	Day finger		
☆870 298	Day star with dial disk		
873 013	Day jumper		
☆884 091	Holding ring for dial		
963 006	Snap for day star with dial disk		
4001 089	Circuit block		
4002 009	Coil block		
4146 006	Step rotor		
☆4225 012	Holding spring for battery		
☆4242 071	Plus terminal of battery connection		
4259 003	Back plate (anti-magnetic)		

☆⇒Please see remarks on the reverse page.

Part numbers in light letters are not shown in photos.