


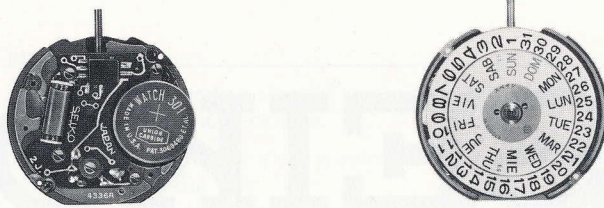

Seiko 4336A Movement Parts (1)

Compiled by EmmyWatch - <https://www.emmywatch.com>


Cal. 4336A



131 072



154 004

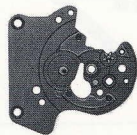

195 006



231 026



241 034



261 221



270 004



271 027



282 028



354 041



354 043



354 053



383 040



384 013



385 007



388 013



391 011



396 006



☆397 017



☆397 022



399 008



☆470 017


499 003

556 011

701 005



706 004

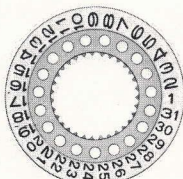

☆801 057



802 015



803 003



808 018



810 008



817 011



868 009



873 013



884 085



963 006



4001 091



4002 009



4146 006



☆4225 019



☆4242 071



4259 008



4270 019



011 541



U.C.C.301



012 354



012 417



012 443



012 444



012 715



012 726



012 752



012 774



012 776



017 074



017 075



017 076



017 079



017 119



017 120



017 503



017 714



017 924

2/1

Cal. 4336A

Characteristics

Casing diameter : ϕ 25.60 mm
 Maximum height : 4.24 mm
 Jewels : 2J
 Frequency of quartz crystal oscillator : 32,768 Hz (Hz=Hertz Cycles per second)
 Driving system : Step motor system (2 poles)
 Regulation system : Trimmer condenser
 Second-setting device
 Calendar (day & date)
 Instant setting device for day & date calendar
 Bilingual change-over system for day of the week
 Battery life indicator : Second hand moves in two-second interval.

PART NO.	PART NAME	PART NO.	PART NAME
131 072	Third wheel bridge	012 417	Third wheel bridge screw
154 004	Fifth wheel bridge	012 443	Circuit block screw (screw for holding spring for battery, screw for plus terminal of battery connection)
195 006	Calendar plate	012 444	Calendar plate screw
231 026	Third wheel & pinion	012 715	Back plate (anti-magnetic) screw
241 034	Fourth wheel & pinion	012 726	Casing clamp screw
261 221	Minute wheel	012 752	Fifth wheel bridge screw
270 004	Center minute wheel	012 774	Date driving wheel screw
271 027	Hour wheel	012 774	Date dial guard screw
282 028	Clutch wheel	012 776	Screw for dial holding ring
354 041	Winding stem (12.89 mm)	017 074	Stopper tube for circuit block
354 043	Winding stem (17.89 mm)	017 075	Tube for third wheel bridge screw A
354 053	Winding stem (20.89 mm)	017 076	Tube for circuit block screw A
383 040	Setting lever	017 079	Tube for circuit block screw B
384 013	Yoke (Clutch lever)	017 119	Tube for third wheel bridge screw B
385 007	Yoke spring (Clutch lever spring)	017 120	Tube for battery connection
388 013	Setting lever spring	017 503	Spacer for circuit block
391 011	Second setting lever	017 714	Lower bush for fifth wheel
396 006	Friction spring for fourth wheel & pinion	017 924	Eccentric dial pin
☆397 017	Lever for unlocking stem	U.C.C.301	Silver oxide battery
☆397 022			
399 008	Casing clamp		
☆470 017	Day star with dial disk		
499 003	Day finger ring		
556 011	Date finger		
701 005	Fifth wheel		
706 004	Sixth wheel & pinion		
☆801 057	Date dial		
802 015	Date driving wheel		
803 003	Setting wheel lever complete		
808 018	Date dial guard		
810 008	Date jumper		
817 011	Intermediate date wheel		
868 009	Day finger		
873 013	Day jumper		
884 085	Holding ring for dial		
963 006	Snap for day star with dial disk		
4001 091	Circuit block		
4002 009	Coil block		
4146 006	Step rotor		
☆4225 019	Holding spring for battery		
☆4242 071	Plus terminal of battery connection		
4259 008	Back plate (anti-magnetic)		
4270 019	Battery connection		
011 541	Upper hole jewel for step rotor		
011 541	Lower hole jewel for step rotor		
012 354	Setting lever spring screw		

☆⇒ Please see remarks on the reverse page.

Cal. 4336A

Remarks :

Lever for unlocking stem

- ☆397 017.....Used when the winding stem is removed by pushing the lever for unlocking stem from the case back side.
- ☆397 022.....Used when the winding stem is removed by pushing the lever for unlocking stem from the dial side.

Day star with dial disk

- ☆470 017(English ↔ Spanish, black figures on white background).....Used when both the crown and the calendar frame are located at **3** o'clock position.

If any other type of day star with dial disk is required, specify the number printed on the disk.

Date dial

- ☆801 057(Black figures on white background).....Used when both the crown and the calendar frame are located at **3** o'clock position.

If any other type of date dial is required, specify ① Cal. No. ② jewels ③ the crown position ④ the calendar frame position and ⑤ Dial No.

Holding spring for battery

- ☆4225 019.....Used only for case without battery hatch.

Plus terminal of battery connection

- ☆4242 071.....Used only for case with battery hatch.