



Seiko 7918A Movement Parts (1)

Compiled by EmmyWatch - <https://www.emmywatch.com>

Cal. 7918A



122 791



131 793



221 791



225 792



231 791



241 792



261 792



271 792



282 589



354 791



383 791



384 710



385 710



387 710



388 799



390 710



391 791



399 770



491 610




701 791



706 791



803 799

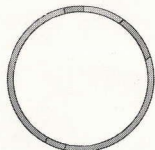

884 557



4001 791



4002 791



4146 791



4216 791



4239 791



4242 791



4408 792



☆ U.G.C. 384



022 282



022 423



022 424



022 465



022 468



022 764



027 810



027 817

2/1

Cal. 7918A

Characteristics

Casing diameter : ϕ 18.0 mm
 Maximum height : 3.6 mm without battery
 Jewels : 7 j
 Frequency of quartz crystal oscillator : 32,768 Hz (Hz=Hertz Cycles per second)
 Driving system : Step motor (2 poles)
 Regulation system : Trimmer condenser

PART NO.	PART NAME	PART NO.	PART NAME
122 791	Center wheel bridge	022 465	Minute hand screw
131 793	Third wheel bridge	022 468	Setting lever spring screw
221 791	Center wheel & pinion	022 764	Dial screw
225 792	Cannon pinion	027 810	Pin for plus terminal of battery connection
231 791	Third wheel & pinion	027 817	Minute wheel pin
241 792	Fourth wheel & pinion	011 406	Upper hole jewel for fourth wheel
261 792	Minute wheel	011 503	Upper hole jewel for fifth wheel
271 792	Hour wheel	011 503	Lower hole jewel for fifth wheel
282 589	Clutch wheel	011 503	Upper hole jewel for step rotor
354 791	Winding stem	011 503	Lower hole jewel for step rotor
383 791	Setting lever	011 541	Upper hole jewel for sixth wheel
384 710	Yoke (Clutch lever)	011 541	Lower hole jewel for sixth wheel
385 710	Yoke spring	011 541	
387 710	Minute wheel bridge	☆SEIKO SB-D1	Silver peroxide battery
388 799	Setting lever spring	☆SEIKO TR41SW	
390 710	Setting lever axle	☆U. C. C. 384	Silver oxide battery
391 791	Second setting lever	☆Maxell SR41SW	
399 770	Casing clamp	☆SONY EVEREADY	
491 610	Dial washer	384	
701 791	Fifth wheel & pinion		
706 791	Sixth wheel & pinion		
803 799	Setting wheel lever complete		
884 557	Holding ring for dial		
4001 791	Circuit block		
4002 791	Coil block		
4146 791	Step rotor		
4216 791	Insulator for battery connection		
4239 791	Rotor stator		
4242 791	Plus terminal of battery connection		
4408 792	Insulating spacer for circuit block		
022 282	Minute wheel guard screw		
022 423	Casing clamp screw		
022 424	Center wheel bridge screw		
022 424	Third wheel bridge screw		
022 424	Circuit block screw		
022 424	Coil block screw		
022 424	Second setting lever screw		

Remarks :

Battery

- ☆ SEIKO SB-D1
- ☆ SEIKO TR41SW
- ☆ U. C. C. 384
- ☆ Maxell SR41SW
- ☆ SONY EVEREADY 384

The applied battery for this calibre might be added the substitutive
in the future. In that case, please refer to separate
 "BATTERIES FOR SEIKO QUARTZ WATCHES".

☆⇒ Please see remarks.

Part numbers in light letters are not shown in photos.