




Citizen 6840 Movement Parts (1)

Compiled by EmmyWatch - <https://www.emmywatch.com>

Catalog No. 68-1

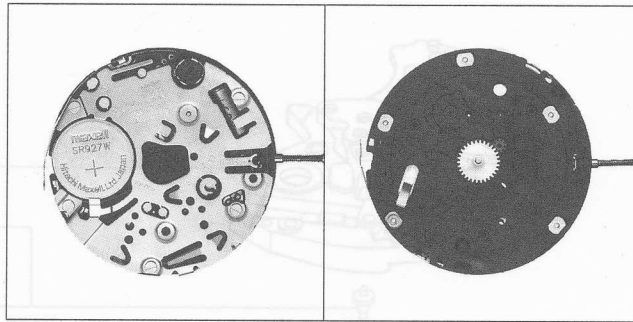

6820
(Catalog No.)

6820

- Analog quartz watch (Multi-hand)
- Hand-type calendar (Year, month, date)
- Alarm 1 (Quick set alarm)
- Alarm 2 (Daily alarm)
- Stopwatch
- Timer
- Local time
- Other functions
 - Calendar monitor
 - Daily alarm set time monitor
 - Zero second return function


Thickness: 3.2mm

Size: 26mm

EMAYWATCH
VINTAGE RESTORATIONS

Oscillation per second

32,768Hz

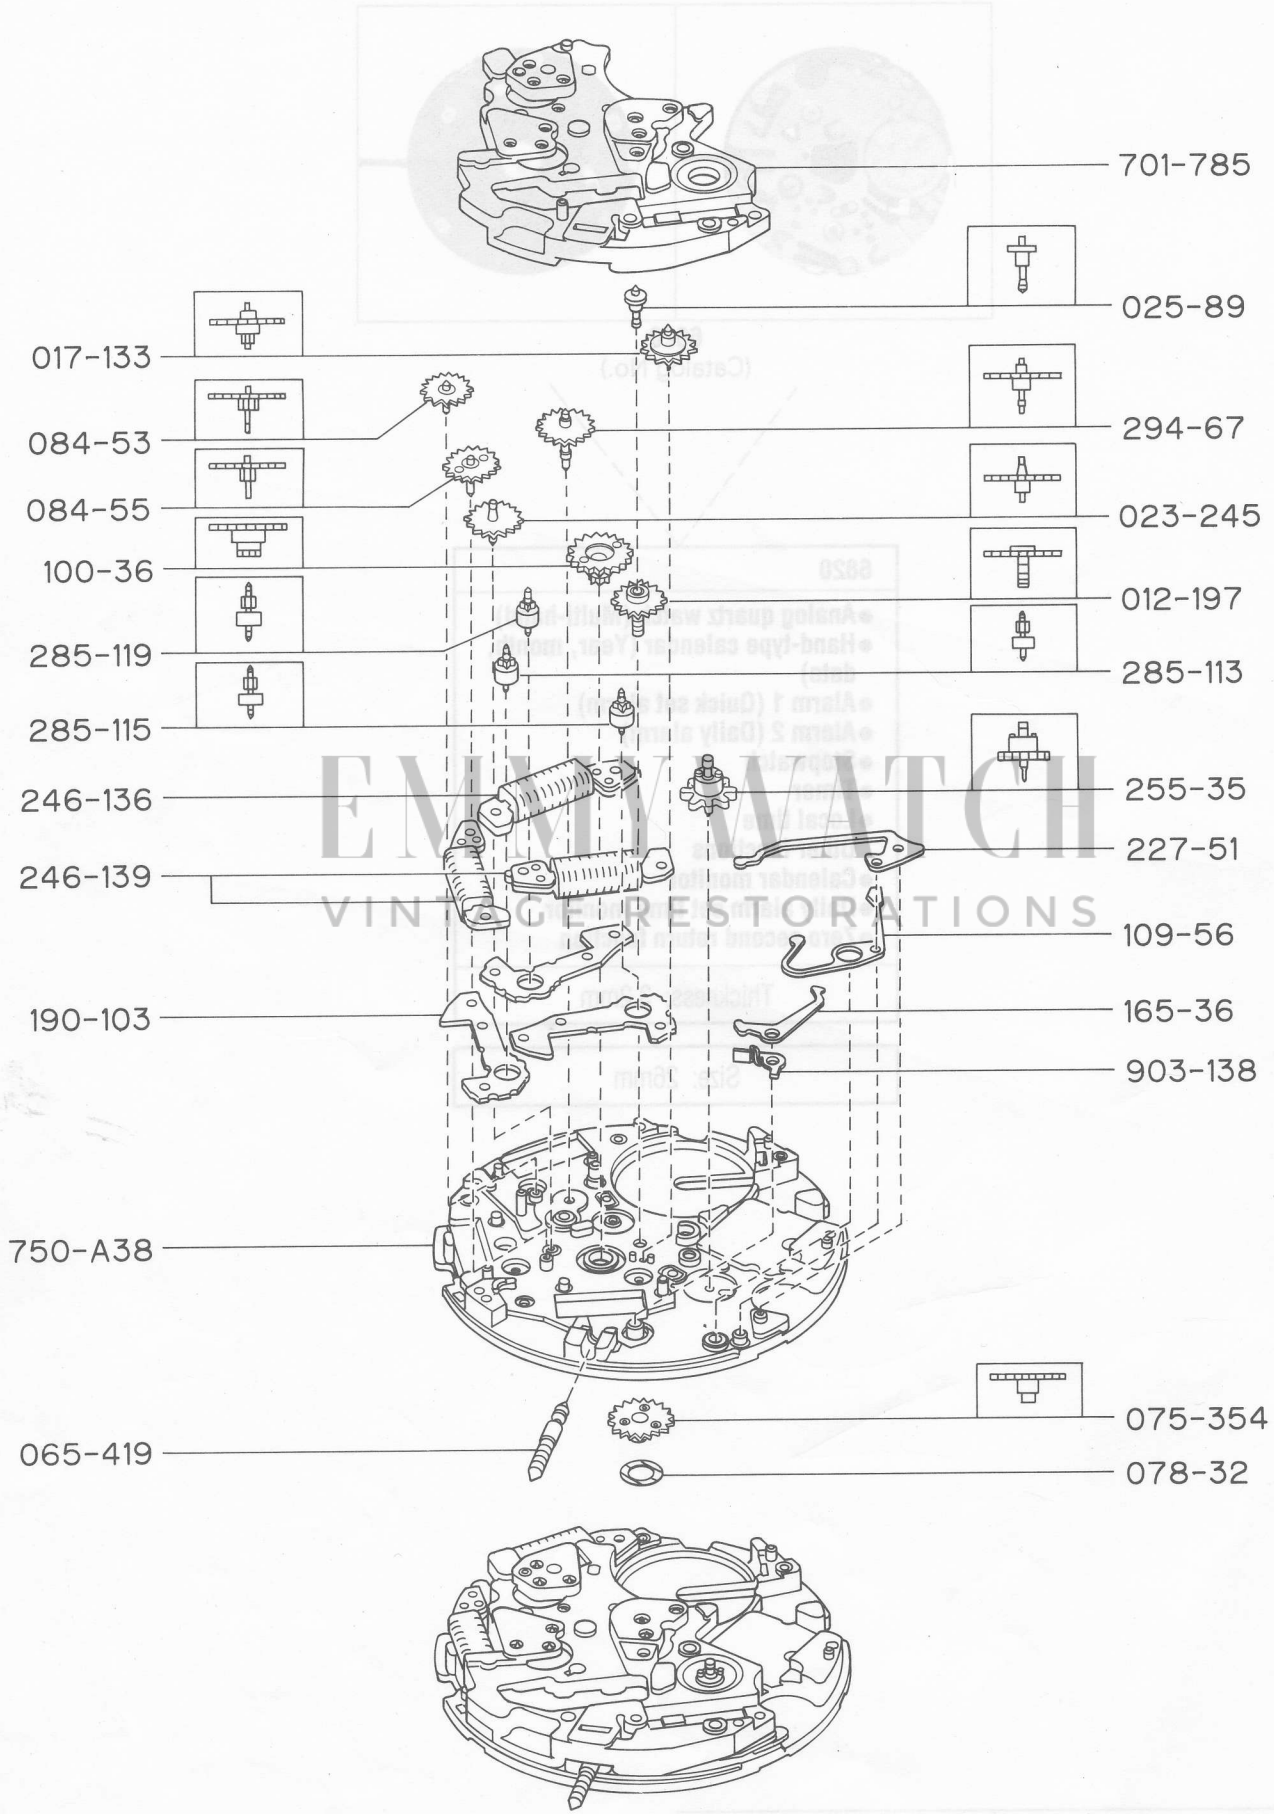

Catalog No. 68-1

Part No.	Name of parts	Caliber No.																			
		6800A	6820A	6830A	6840A	6850A															
		Nos. of jewels																			
		00	00	00	00	00															
012	Center wheel and pinion	195	197	199	195	—○															
017	Third wheel and pinion	132	133		132	—○															
017	Third wheel and pinion [II]			134																	
023	Fourth wheel and pinion	245	—○	—○	—○	—○															
023	Fourth wheel and pinion [II]			247																	
025	Second wheel	88		91	88	—○															
025	Center wheel axle		89																		
065	Setting stem	419	—○	—○	—○	—○															
072	Minute wheel and pinion [I]	98			98																
072	Minute wheel and pinion [II]	104																			
072	Minute wheel and pinion [III]				105	—○															
084	Intermediate dual wheel	53	—○			○															
084	Fifth wheel and pinion	55	—○	—○	—○	—○															
084	Fifth wheel and pinion [II]			56																	
084	Intermediate disk wheel [I]				53																
087	Intermediate disk wheel [II]				104																
087	Intermediate disk wheel [III]				105																
087	Intermediate disk wheel [IV]				106																
087	Intermediate second wheel	102		102	—○	—○															
100	Intermediate hour wheel		36	—○																	
109	Mode jumper	56	—○	—○	—○	—○															
110	Dial spacer				31	—○															
165	Rocking bar	36	—○	—○	—○	—○															
190	Stator	103	—○	—○	—○	—○															
227	Switch actuating spring	51	—○	—○	—○	—○															
231	Power cell connector spring	184	—○	—○	—○	—○															
234	Power cell strap	666	667	679	684	671															
246	Coil unit [I]	136	—○	—○	—○	—○															
246	Coil unit [II]	139	—○	—○	—○	—○															
255	Mode wheel	35	—○	—○	36	—○															
258	Switch spring	34	—○	—○	—○	—○															
279	Unit of electronic circuit	689	692	705	708	695															
280	Power cell	44	—○	—○	—○	—○															
285	Rotor [I]	113	—○	—○	—○	—○															
285	Rotor [II]		115	—○																	
285	Rotor [III]	119	—○	—○	—○	—○															
294	Dual wheel	66	67			66															
701	Train wheel bridge	785	—○	—○	—○	—○															
902	Wire spring	221	—○	—○	—○	—○															
903	Switch spring	138	—○	—○	—○	—○															
923	Screw for power cell strap	86	—○	—○	—○	—○															
923	Screw for coil unit	○	—○	—○	—○	—○															
929	Screw for disk wheel				48	—○															
750	Plate complete	A38	—○	—○	A39	—○															

alarm contact spg
(Coils spg)

902-221

280-44

923-86

234-667

279-692

258-34

231-184

EMMY WATCH
VINTAGE RESTORATIONS

