




Jaeger Lecoulre 404 Movement Parts (1)

Compiled by EmmyWatch - <https://www.emmywatch.com>

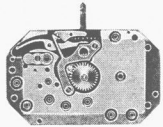

CAL. 9" - 404

BASE CAL. 9" - 407

LE COULTRE

Exécution en 15 et 17 pierres.

Hauteur totale 3.10 mm.

Dimensions engaugeage L. 20.60 mm, L. 12.80 mm.

Nombre d'alternances 18000.

Dimensions ressort de barillet :

L. 230 mm, H. 0.90 mm, E. 0.0875 mm.

Diamètre filetage de la tige remontoir 0.90 mm.



EMMYWATCH
VINTAGE RESTORATIONS

- 125 Pont d'ancre
- 180/1 Barillet complet avec ressort
- 182 Barillet avec couvercle
- 195 Arbre de barillet
- 200 Roue de centre avec chaussée
- 210 Roue moyenne
- 220 Roue de seconde
- 240 Chaussée lanterne (ind. haut.)
- 250 Roue des heures (indiq. hauteur)
- 260 Roue de minuterie
- 301 Raquette pour spiral plat
- 311 Coqueret
- 330 Plaque contre-pivot p. balancier
- 364 Porte-piton pour spiral plat
- 401 Tige de remontoir
- 407 Pignon coulant
- 410 Pignon de remontoir
- 415 Rochet
- 417 Rochet intermédiaire
- 419 Noyau de rochet intermédiaire
- 420-424 Roue de couronne et roue de couronne intermédiaire
- 422/1 Bague de rochet intermédiaire
- 434 Cliquet-ressort
- 435/1 Bascule-ressort
- 443 Tirette
- 445 Ressort de tirette
- 450 Renvoi
- 705 Roue d'ancre pivotée
- 710 Ancre montée
- 714 Tige d'ancre
- 720 Balancier pivoté avec plateau (indiquer ø trou de pierre)
- 721 Balancier avec spiral plat (indiquer ø trou de pierre)

- 723 Axe de balancier
- 730 Plateau
- 734 Spiral plat réglé, piton rond
- 734/1 Spiral plat réglé, piton triangul.
- 736 Virole pour spiral plat
- 738 Piton rond pour spiral plat
- 738/1 Piton triangulaire p. spiral plat
- 770 Ressort de barillet
- 5110 Vis de ponts
- 5125 Vis de pont d'ancre
- 5311 Vis de coqueret
- 5330 Vis de contre-pivot p. balancier
- 5364 Vis de porte-piton
- 5420 Vis de roue de couronne
- 5417- Vis de rochet interméd. et roue
- 5424 de couronne intermédiaire
- 5443 Vis de tirette
- 5445 Vis de ressort de tirette
- 5738- Vis de piton rond et de piton
- 5738/1 triangulaire
- 5750 Vis de cadran
- 601 Pierre roue de centre dessus
- 602 Pierre roue centre dessous
- 605-606 Pierre de roue moyenne dessus et dessous
- 610-611 Pierre de roue de seconde dessus et dessous
- 615-616 Pierre de roue d'ancre dessus et dessous
- 620-621 Pierre d'ancre dessus et dessous
- 630-631 Pierre de balancier dessus et dessous

- 125 Pallet cock
- 180/1 Barrel complete (with mainspring)
- 182 Barrel and cover (without arbor)
- 195 Barrel arbor
- 200 Center wheel and pinion with cannon pinion
- 210 Third wheel and pinion
- 220 Fourth wheel and pinion
- 240 Cannon pinion with clam-notch (mention height)
- 250 Hour wheel (mention height)
- 260 Minute wheel
- 301 Regulator for flat hairspring
- 311 Upper cap jewel with end-piece, for balance
- 330 Lower cap jewel with end-piece, for balance
- 364 Stud holder for flat hairspring
- 401 Winding stem
- 407 Clutch wheel
- 410 Winding pinion
- 415 Ratchet wheel
- 417 Intermediate ratchet wheel
- 419 Intermediate ratchet wheel core
- 420-424 Crown wheel and intermediate crown wheel
- 422/1 Intermediate ratchet wheel ring
- 434 Clicking spring
- 435/1 Spring yoke
- 443 Setting lever
- 445 Setting lever spring
- 450 Setting wheel
- 705 Escape wheel and pinion
- 710 Jewelled pallet fork and staff
- 714 Pallet staff
- 720 Balance with roller, pivoted (mention ø of jewel hole)

- 721 Balance with flat hairspring, regulated (mention ø of jewel hole)
- 723 Balance staff
- 730 Roller
- 734 Flat hairspring regulated, with round stud
- 734/1 Flat hairspring regulated, with triangular stud
- 736 Collet for flat hairspring
- 738 Round stud for flat hairspring
- 738/1 Triangular stud for flat hairspring
- 770 Mainspring
- 5110 Bridge screw
- 5125 Pallet cock screw
- 5311 Screw for upper end-piece (balance)
- 5330 Screw for lower end-piece (balance)
- 5364 Screw for stud holder
- 5420 Crown wheel screw
- 5417- Screw for intermediate ratchet wheel and for intermediate crown wheel
- 5443 Setting lever screw
- 5445 Setting lever spring screw
- 5738- Round stud screw and triangular stud screw
- 5738/1 Dial screw
- 601 Jewel for center wheel, upper
- 602 Jewel for center wheel, lower
- 605-606 Jewel for third wheel, upper and lower
- 610-611 Jewel for fourth wheel, upper and lower
- 615-616 Jewel for escape wheel, upper and lower
- 620-621 Jewel for pallet cock, upper and lower
- 630-631 Balance jewel, upper and lower