




**Vacheron Constantin 153 Movement Parts (1)**

*Compiled by EmmyWatch - <https://www.emmywatch.com>*



Exécution en 17 pierres.  
Hauteur totale 3.40 mm.  
Diamètre encadrement 15.08 mm.  
Nombre d'alternances 18000.  
Dimensions ressort de barillet :  
L. 190 mm, H. 1.35 mm, E. 0.055 mm.  
Diamètre filetage de la tige remontoir 0.90 mm.

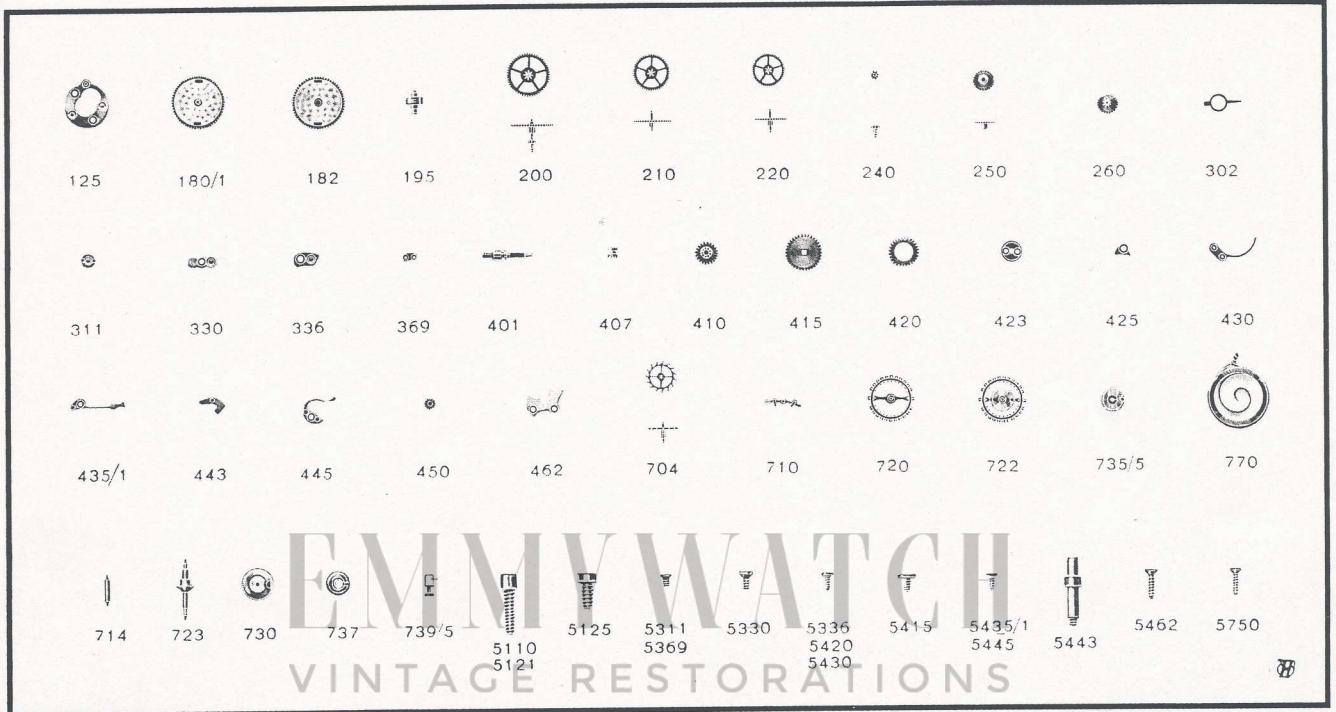

EMMYWATCH  
VINTAGE RESTORATIONS

- 125 Pont d'ancre
- 180/1 Barillet complet avec ressort
- 182 Barillet avec couvercle (sans arbre)
- 195 Arbre de barillet
- 200 Roue de centre avec chaussée
- 210 Roue de moyenne
- 220 Roue de seconde
- 240 Chaussée (indiquer la hauteur)
- 250 Roue des heures (indiquer la hauteur)
- 260 Roue de minuterie
- 302 Raquette pour spiral Breguet
- 311 Coqueret
- 330 Plaque c/pivot pour balancier
- 336 Plaque c/pivot dessus pour roue d'ancre
- 369 Plaque piton
- 401 Tige de remontoir (indiquer le filetage)
- 407 Pignon coulant
- 410 Pignon de remontoir
- 415 Rochet
- 420 Roue de couronne
- 423 Noyau de couronne
- 425 Cliquet
- 430 Ressort de cliquet
- 435/1 Bascule-ressort
- 443 Tirette
- 445 Ressort de tirette
- 450 Renvoi
- 462 Pont du rouage de minuterie
- 704 Roue d'ancre pivotée, contre-pivot dessus
- 710 Ancre montée
- 714 Tige d'ancre

- 720 Balancier pivoté avec plateau (indiquer Ø trou pierre)
- 722 Balancier avec spiral Breguet (indiquer Ø trou pierre)
- 723 Axe de balancier
- 730 Plateau
- 735/5 Spiral Breguet réglé, piton coulissant
- 737 Virole pour spiral Breguet
- 739/5 Pilon coulissant pour spiral Breguet
- 770 Ressort de barillet
- 5110-5121 Vis de ponts et coq
- 5125 Vis de pont d'ancre
- 5311-5369 Vis de coqueret et plaque piton
- 5330 Vis plaque c/pivot p. balancier
- 5336- Vis plaque c/pivot dessus pour roue d'ancre, roue de couron., ressort cliquet
- 5420- roue d'ancre, roue de couron., ressort cliquet
- 5430
- 5415-5425 Vis de rochet et cliquet
- 5435/1- Vis bascule ressort et ressort
- 5445 tirette
- 5443 Vis de tirette
- 5462 Vis ponti rouage de minuterie
- 5750 Vis de cadran
- 601 Pierre de roue de centre dessus
- 605 Pierre roue de moyenne dessus
- 606-611 Pierre de roue de moyenne dessous et roue seconde dessous
- 610 Pierre de roue seconde dessus
- 615-616 Pierre de roue d'ancre dessus et dessous
- 620-621 Pierre d'ancre dessus et dessous
- 630 Pierre de balancier dessus
- 631 Pierre de balancier dessous

- 125 Pallet cock
- 180/1 Barrel complete with mainspring
- 182 Barrel and cover
- 195 Barrel arbor
- 200 Center wheel and pinion with cannon pinion
- 210 Third wheel and pinion
- 220 Fourth wheel and pinion
- 240 Cannon pinion (mention height)
- 250 Hour-wheel (mention height)
- 260 Minute-wheel
- 302 Regulator for Breguet hairspring
- 311 Upper cap-jewel with end-piece for balance
- 330 Lower cap-jewel with end-piece, for balance
- 336 Upper cap-jewel with end-piece, for escape wheel
- 369 Hairspring stud plate
- 401 Winding stem (mention Ø of threading)
- 407 Clutch wheel
- 410 Winding pinion
- 415 Ratchet wheel
- 420 Crown wheel
- 423 Crown wheel core
- 425 Click
- 430 Click spring
- 435/1 Spring-yoke
- 443 Setting-lever
- 445 Setting-lever spring
- 450 Setting wheel
- 462 Minute work cock
- 704 Escape wheel and pinion, pivoted, for upper end-piece
- 710 Jewelled pallet fork and staff
- 714 Pallet staff

- 720 Balance with roller, pivoted (mention Ø of jewel hole)
- 722 Balance with Breguet hairspring, regulated (mention Ø of jewel hole)
- 723 Balance staff, pivoted
- 730 Roller
- 735/5 Breguet hairspring regulated, sliding stud
- 737 Collet for Breguet hairspring
- 739/5 Sliding stud for Breguet hairspring
- 770 Mainspring
- 5110-5121 Bridge and cock screw
- 5125 Pallet cock screw
- 5311- Upper end-piece and hairspring stud plate screw
- 5369
- 5330 Lower end-piece screw
- 5336- Screw for escape wheel upper end-piece, crown wheel and click spring
- 5420- spring
- 5430
- 5415-5425 Ratchet wheel and click screw
- 5435/1- Spring-yoke and setting lever spring screw
- 5445
- 5443 Setting lever screw
- 5462 Minute work cock screw
- 5750 Dial screw
- 601 Jewel for center wheel, upper
- 605 Jewel for third wheel, upper
- 606-611 Jewel for third and fourth wheel, lower
- 610 Jewel for fourth wheel, upper
- 615-616 Jewel for escape wheel, upper and lower
- 620-621 Jewel for pallet staff, upper and lower
- 630 Balance jewel, upper
- 631 Balance jewel, lower